


STEELITE

DG531

15-INCH CORDLESS SCARIFIER

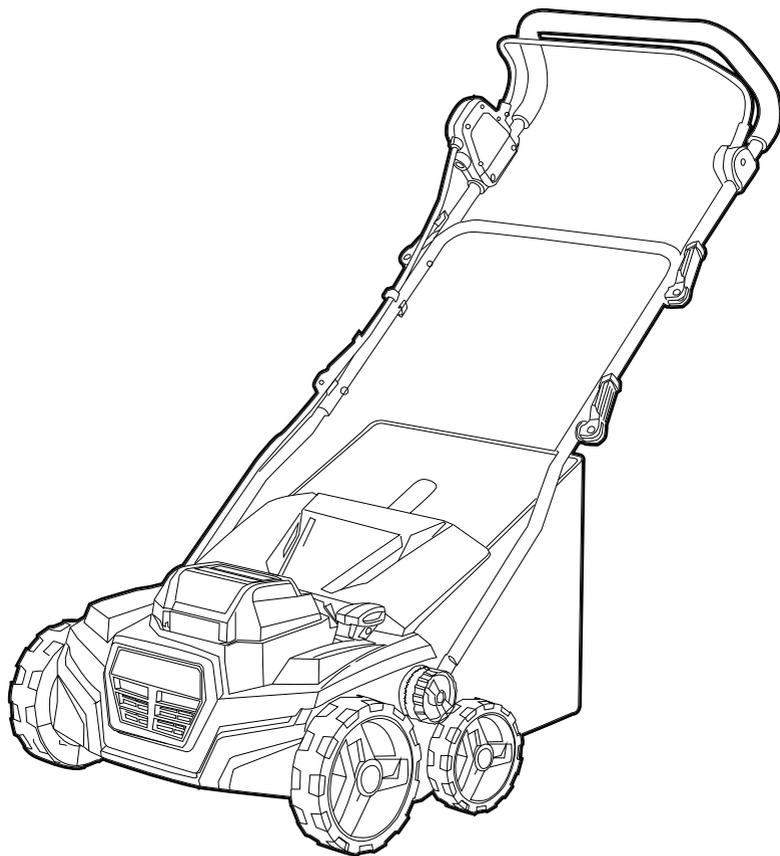

Please read this manual carefully before use
and keep it in a safe place

General safety regulations

Important safety notice

Unpack the product carefully and do not throw away any of the packaging until you have found all the parts of the product.

Store the product in a dry place out of reach of children.

Read all the warnings and instructions. Failure to comply with the warnings and instructions may lead to electric shock, fire and/or serious injuries.

Packaging

The product's packaging prevents damage during transport. This packaging is a resource and can be recycled.

User manual

Before starting to work with the machine, please read the following safety regulations and instructions for use. Get familiar with the controls and correct use of the equipment. Keep the user's manual in a safe place for easy future reference. Save the original packaging, including the internal packing material, guarantee card and proof of purchase receipt for at least the time of the guarantee. If you need to transport this power tool, pack it in the original cardboard box for maximum protection during shipping or transport (e.g. when moving or when you need to send this power tool to a service centre for repair).

⚠ Note: If you hand over the appliance to somebody else, do so together with this user's manual. Make sure you use the appliance properly by following the instructions in the included User manual. The user's manual also contains operating, maintenance, and repair instructions.

The manufacturer assumes no responsibility for accidents or damages arising from failure to comply with these instructions.

Symbols

	<p>Attention! Before putting into operation, carefully read the user's manual and the general safety instructions!</p>
	<p>Do not work in the rain or in unfavourable climatic conditions!</p>
	<p>Attention, the blade of the scarifier continues to rotate for some time after it is turned off!</p>
	<p>Keep a safe distance!</p>
	<p>Attention, rotating blades! Sharp blade/s. Protect yourself against injury and loss of fingers.</p>
	<p>Before setting up the machine or carrying out maintenance on the machine, or if the cordless power cable has become jammed or is damaged, always turn off the motor and pull the plug out of the cordless power socket!</p>
	<p>While working use protective aids.</p>
	<p>Before performing work on the machine, pull the power cord out of the electrical power socket.</p>

Safety instructions

Thank you for purchasing this garden scarifier. Before you start using it, please carefully read this user's manual and save it for possible future use.

Checks before every use

Check the cordless scarifier before every use.

Do not use the cordless scarifier if the safety mechanisms (start lever, safety brake, rear lid or cover) are damaged or worn out.

Never use the machine with a blocked or missing safety mechanism.

▲ NOTE: Make sure that all nuts and bolts are pulled tight and that the scarifier is in good operating condition.

Before starting work, inspect the area that is to be aerated. Check the work area for any foreign objects (e.g. stones, branches, rope) and remove them if necessary.

Proper use / Responsibility

ATTENTION! Danger! Danger of injury! The scarifier may cause serious injuries!

Do not place hands or feet near the scarification cylinder.

You are responsible for the safety of the methods of use described in these instructions.

Work only under good visibility.

Do not open the rear cover during use.

Acquaint yourself with the surroundings of your work area. Check for potential dangers, which may not be audible due to the noise of the machine.

Wear solid footwear and long pants to protect your legs.

Make sure that your legs are at a sufficient distance from moving parts.

Make sure that there are no other people (particularly children) or animals in the work area.

Always push the scarifier at walking speed.

Operating position: make sure that you have safe foot support during operation.

Be especially careful when changing direction on a slope.

ATTENTION! Be extremely careful when walking backwards. You could stumble!

Do not use the cordless scarifier in the rain or in damp or wet conditions.

Do not work with the scarifier near the edges of swimming pools or garden ponds.

Please adhere to all local restrictions related to noise levels.

Interrupting work

▲ ATTENTION! Never leave the cordless scarifier in the work area without supervision

Safety instructions

When you stop working, place the machine in a safe location. Unplug the power plug! If you stop working in order to move to a different work location, always turn the cordless scarifier off while carrying it. Move the wear compensation lever transport position.

In the event that you hit an obstacle while scarifying, turn off the cordless scarifier and remove the obstacle. Check the cordless scarifier for damage and have it repaired if necessary.

Electrical safety

Keep the extension cord away from the scarification cylinder!

Never use the cordless scarifier in the rain.

Please adhere to local residential noise restrictions.

It is necessary to regularly inspect the power / extension cord for damage and signs of wear and tear.

In the event that the power / extension cord is damaged, immediately unplug the power cord.

The socket on the extension cord must be water resistant providing protection against spraying water, or the power sockets for the extension cord must be made from rubber or must have a rubber cover.

Extension cords must meet the requirements Of DIN VDE 0620.

Only use approved extension cords with the corresponding conductor cross-sections. Please consult your electrician.

It is necessary to use connecting accessories for the extension cord.

For portable equipment used outdoors, we recommend the use of a residual current device with a maximum current rating of 30 mA. In Switzerland, the use of a residual current device is compulsory.

Purpose of use

Intended use

The Cordless Scarifier is designed for aerating lawns and grass areas in private gardens and yards. It is not intended for use in public facilities, parks, sports fields, on roads, in agriculture or forestry.

⚠ ATTENTION! To prevent injury, the cordless scarifier must not be used for trimming shrubs, hedges and bushes. Furthermore, the cordless scarifier must not be used for leveling uneven terrain.

Preparation

When operating the machine, always wear sturdy shoes and long pants. Do not operate the machine in bare feet or in sandals. Avoid wearing clothes that are loose or have loose cords, or a tie.

Fully inspect the area where the machine is to be used and remove all objects that may be thrown by it.

Before use, always visually inspect the machine to see if that cutting unit, the bolts and the latter assembly are not worn or damaged, Replace worn or damaged components in order to maintain good balance. Replace damaged or illegible labels.

Specifications

Model	DG531
Voltage	2x20V ===
No load speed	3,000 RPM
Working Width	15 IN. / 380 MM.
Working Depth	-12/-9/-6/-3/+6 MM. / -0.47/-0.35/-0.23/-0.11/0.23 IN.
Scarifier Blade	16 PCS
Aerator spring	24 PCS
Grass catcher(L)	45 L (11.88 GAL)

Operation

Never allow a child or other person who has not read the operating instructions to use the garden tool. Local regulations may set a minimum age limit for the user.

Mow only in daylight or in good artificial light.


Do not work with the lawn mower in adverse weather conditions.

Only take the device at pace, never run.


Never use the lawn mower without the safety equipment.

Assembling the machine

1. Attach the handle's bottom parts (fig.2, point 7) using the screw (point 14). Adjust the required handle height using the XZN spline (point 17).

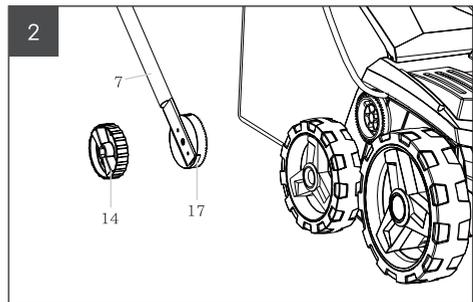



2. Screw on the handle's middle part with the power cord safety clamp attached using the fastcoupling lever and the handle screw (fig. 3).

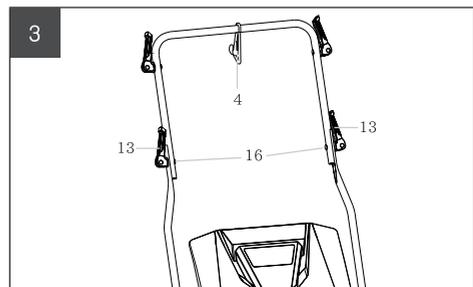


Assembling the machine

3. Screw on the handle's top part (fig.4).

4. Attach the power cord to the handle using the plastic clips (fig.5).

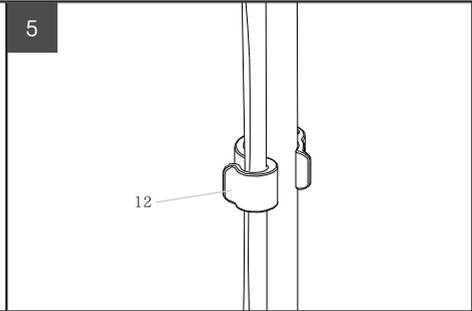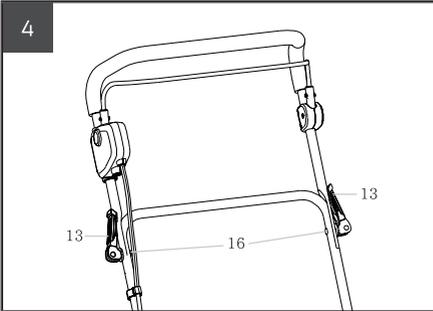

5. Place the steel frame ⑩ into the textile-collection basket ⑨ and attach all fastener to the left, right and rear poles of the frame. Make sure that all fasteners are secured correctly (fig. 6).

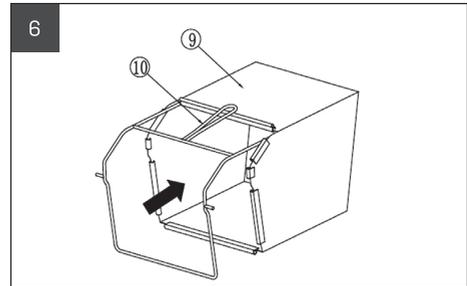


6. Installation of the completely assembled collection basket on to the scarifier (fig.7)

A. Lift up the protective cover ⑪

B. Make sure that the ejection chute is clear and free of debris.

C. Place the fully assembled collection-basket on to the fastening points in the rear part of the chassis, as shown.

D. Place the protective cover ⑪ on top of the collection basket. Check that the collection basket is seated correctly.

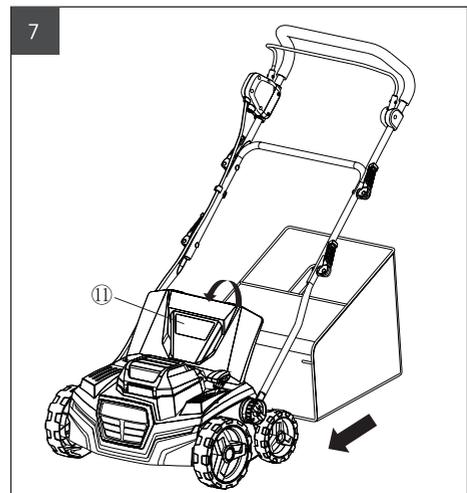

▲ NOTE: For use without the grass catcher, the lawnmower may be used without the collection basket with the protective cover ⑪ in the lower position.


Replacing blades

⚠ DANGER!


The cylinders may cause injuries!

Prior to replacement, disconnect the machine from the power grid and wait for the cylinder to come to a stop. When replacing, wear work gloves.


1. Screw out bolt ① on the underside of the chassis (fig. 8).

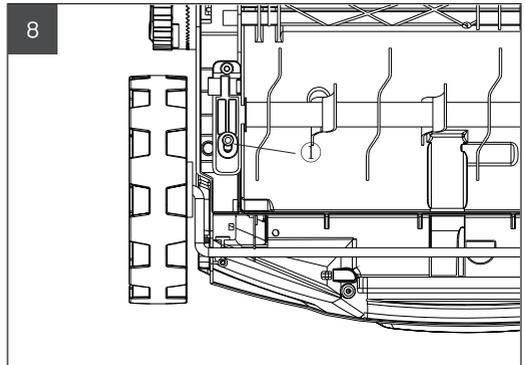

2. Lift the cylinder ③ at an angle and pull it out (fig. 9).

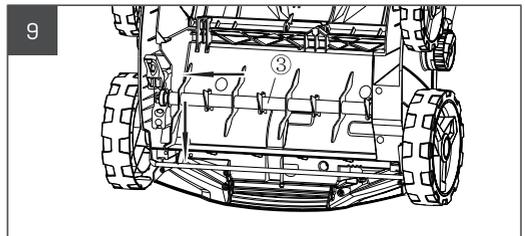

3. Slide the second cylinder on to the drive shaft so that the pin ⑤ fits into the respective part of the drive shaft ④ (fig.10).

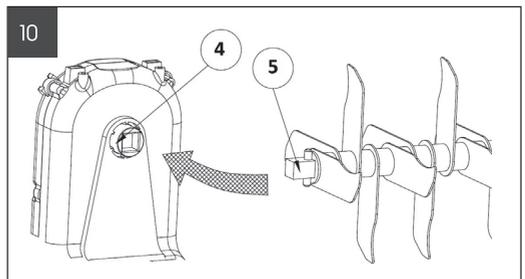

4. Tighten the screw ① to secure again(-fig.8)

Setting up the scarifier

⚠ ATTENTION!

The working depth with the scarification cylinder should be no more than 3 mm. The aeration cylinder with springs should copy the contour of the ground during operation. Setting an excessive working depth may even without visible wear on the blades/springs result in damage to the scarification cylinder or the overloading and destruction of the motor. The lawn may also be damaged.

Adjustment after wear

To maintain the recommended working depth, use the working depth adjustment control (fig. 1, point 8).

NOTE: The blades and springs of the scarifier wear out depending on the manner in which they are used.

The more intensively the scarifier is used, the greater the wear on the blades and springs.

Hard or very dry ground accelerates the wearing out process as does excessive use. In the event that, as a result of wear on the blades, the results of your work with the scarifier worsen, it is possible to adjust the scarification cylinders so that the working depth is constantly kept at the above-described depth.


Putting into operation (fig. 11)

Before starting it up again, check that the blade has come to a complete stop. Do not turn on and off in rapid succession.

Starting


1. Press and hold the safety button ①. Pull the starting lever ② to the handle.

2. Release the safety button.

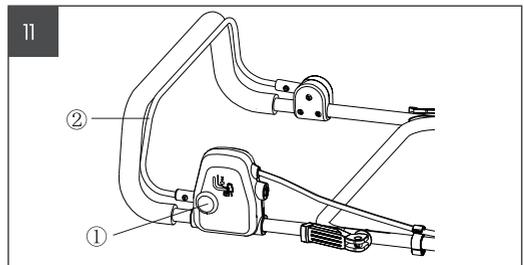

Turning off

Release the starting lever ②.

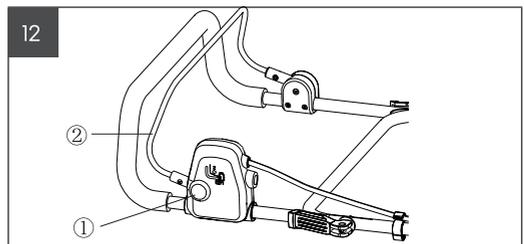

Maintenance

Cleaning the scarifier

⚠ ATTENTION! Danger! A rotating blade may cause injuries.

⚠ ATTENTION! Prior to maintenance, disconnect the machine from the power grid and wait for the scarification cylinder to come to a stop.

⚠ ATTENTION! While performing maintenance use work gloves.

The scarifier should be cleaned after every use.

⚠ ATTENTION! Risk of injury and material damage.

⚠ ATTENTION! Do not clean the scarifier under running water (especially not under high pressure)

⚠ ATTENTION! Do not use hard or pointed items for cleaning the scarifier.

Remove grass and accumulated debris from the wheels, scarification cylinder and the cover.

Scarification/aeration

For comfortable work with the scarifier, it is best to start working at the location closest to the power source and to proceed away from the power source.

Scarify / aerate the lawn at a right angle from the power source and place the power cord on the side that has already been treated.

⚠ ATTENTION! Do not place too much strain on the motor when working, especially in demanding conditions. When the motor is put under strain, the motor speed will decline and you will hear a change in the noise of the motor. Whenever this happens, stop working, release the starting lever and reduce the scarification/aeration depth. Otherwise the machine could be damaged.

⚠ **NOTE:** The motor is protected by a safety mechanism that is activated at the instant that the blades are caught or the engine is overloaded. Whenever this occurs, turn the machine off and pull the power plug out of the power source. The safety mechanism will reset only when the starting lever is released. Remove all obstacles and wait several minutes before resetting the safety mechanism and resuming work. At this point, do not play with the starting lever as this will extend the safety mechanism reset time. In the event that the machine turns off again, raise the height of scarification / aeration again, which will reduce the load on the motor.

STEELITE

Product Warranty Card

Dear users :

Thank you for buying our products. In order to ensure your profit, users who buy our products can contact local distributor or Specified repair stations with invoice and warranty cards if the product failures due to quality problems.

Warranty Notice:

1. We will provide a 2-year limited warranty for the machine and a 1-year limited warranty for the battery, starting from the date of your purchase.
2. This warranty card and purchase invoice are the voucher of after-sales service provided by our company to customers. The card must be detailed only after filling in the following form and affixing the official seal with the distributor.
3. In one of the following cases, free warranty service will be invalid, and maintenance fees will be required:
 - (1) Exceed the expiration date.
 - (2) Failure or damage caused by not following the requirements of the product manual, maintenance or improper storage.
 - (3) Failure or damage caused by disassembling, repairing or modification of the product without the permission of our company.
 - (4) Machine breakdown or damage caused by force majeure.
 - (5) Consumable accessories.

This card is issued with the product. One card for one machine, to ensure that you can fully enjoy the right to free warranty service provided by the company, please keep this card properly, lost will not be replaced.

Purchase Date: _____ (Year/Month/Day)

Product Certificate

Inspector:

01

Date of manufacture:

NINGBO DELI TOOLS CO., LTD.
No. 128 Chezhan West Road, Huangtan Town,
Ninghai County, Ningbo, Zhejiang, China
delitoolsglobal@nbdeli.com
CUSTOMER SUPPORT EMAIL: service@steelitetool.com
+1 888-909-8850
MADE IN CHINA

